

DESCALER

DESCRIPTION

Dishwashing Machine Descaler

DESCALER is an acid based cleaner formulated to dissolve and remove scale and other mineral deposits in dishwashing machines.

DIRECTIONS FOR USE

Add to water in the wash tank:

Small Machines - 1 litre

Large Machines - 5 litres

Wear gloves when using this product. Read safety data before using this product.

NB: Do not mix with detergents or other chemicals

HAZARD CATEGORY



IRRITANT

POISON

- Harmful if swallowed
- Causes severe skin burns and eye damage.

SAFETY

Keep out of reach of children.

Read label before use.

Do not breathe dust, fume, gas, mist, vapours or spray.

Wash hands, face and all exposed skin thoroughly after handling.

Do not eat, drink or smoke when using this product.


Wear protective clothing, gloves, eye/face protection and suitable respirator.

SAFETY EQUIPMENT



FIRST AID

If poisoning occurs, contact a Doctor or Poisons Information Centre (Phone Australia 131 126; New Zealand 0800 764 766). If medical advice is needed, have product container or label at hand. IF SWALLOWED: Immediately call a POISON CENTER or doctor/physician. IF SWALLOWED: Rinse mouth. Do NOT induce vomiting. IF ON SKIN (or hair): Remove/Take off immediately all contaminated clothing. Rinse skin with water/shower. IF INHALED: Remove victim to fresh air and keep at rest in a position comfortable for breathing. IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. Immediately call a POISON CENTER or doctor/physician. Rinse mouth. Wash contaminated clothing before reuse.

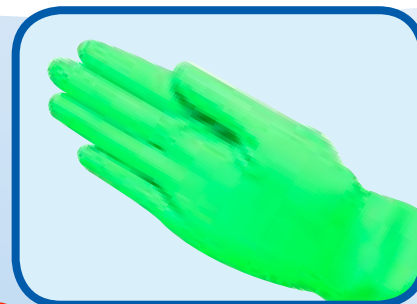

NEVER MIX ANY CHEMICALS